

WIFI Digital Heating Thermostat User Manual

Many thanks for your selection of our products and services, and also for your trust and support to us.

Search for "Smart life" from google play or App store to Download the Wifi App




- Turn on the thermostat, press and hold the key combination "⋮" and "🕒" Activate WIFI distribution network icon

Product Specifications

- ☆ Power: 90-240Vac 50/60Hz
- ☆ Display accuracy: 0.5°C
- ☆ Probe sensor: NTC(10k)1%
- ☆ Contact capacity: 3A/(WW)
- ☆ Limit temperature range: 1~70°C
- ☆ Range of temperature adjustment: 5~35°C
- ☆ Range of temperature display: 1~70°C
- ☆ Insulating condition: Normal environment
- ☆ Running program: Set per 1 week as a cycle
- ☆ Output: Switch relay
- ☆ Installation: recessed type (in the wall)
- ☆ Size(mm): 86*86*10

Wiring Diagram

AC90-240V 50/60Hz
I_{max}: 3A

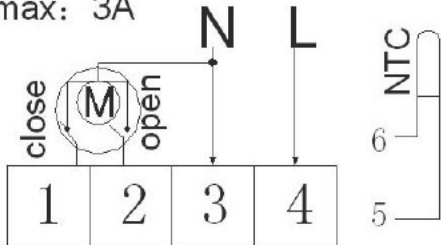

Displays



Description of icon

- Auto mode: run preset program
- Manual mode
- Clock

- Programming mode
- Temporary manual mode
- Holiday mode, Holiday days and temperature can be set to run in countdown mode
- Heating, icon disappears to stop heating
- External NTC sensor
- WIFI connection, flashing EZ distribution mode
- Child lock
- Wifi status: Disconnection
- Cloud icon: flashing AP distribution network mode
- Activate window function
- Room temp
- Setting temp
- Cooling mode, the icon blinking means cooling mode output

Operation key

NO	symbols	represent
A		Turn ON/OFF: short press to turn on/ turn off
B		<ol style="list-style-type: none"> Short press to switch automatic mode and manual mode Turn on thermostat, long press for 3-5 seconds to enter into programmable setting Turn off thermostat, long press for 3-5 seconds to enter into advance option A
C		<ol style="list-style-type: none"> Confirm key short press to set time Turn on thermostat, long press it for 3-5seconds to holiday mode setting. Appear OFF, press or change to ON, then press to confirm opening holiday mode Turn off thermostat, long press it for 3-5s to enter into advanced option B
D		<ol style="list-style-type: none"> Decrease key Long press to lock /unlock
E		<ol style="list-style-type: none"> Increase key Long press to inquire external sensor temperature (only available for BN item select N3 in the advance option B) In the program model, press or enter to temporary manual mode

Programmable

5+2 (factory default), 6+1 and 7 models 6 times period setting for user choose. In the advanced options choose model of you need, under power on state, long press for 3-5 seconds enter into programming mode setting, then short press choose: hour, minute, time period, and press and to adjust data, finished setting, about 10 seconds will automatic save and exist.

Wake up	Leave home	Back home	Leave home	Back home	Sleep

6: 00	20℃	8: 00	15℃	11: 30	15℃	13:30	15℃	17:00	15℃	22:00	15℃
-------	-----	-------	-----	--------	-----	-------	-----	-------	-----	-------	-----

Advanced option A

Power off state, long press for 3-5 seconds to access advanced option A.

From A1 to AE, short press to choose the option, and adjust data by or , short press to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
A1	Measure Temperature Calibration	-9--+9℃ (Displayed as the corrected room temperature value)	-1
A2	Start/stop working temperature difference setting	0.5-2.5℃	1℃
A3	Children lock setting	0:half lock 1:full lock	0
A4	Power on/off state memory after electricity cut	0:Thermostat on/off with memory when electrify 1:Thermostat off when electrify 2:Thermostat on when electrify	0
A5	Standby bright	0: Off 1: Weakly bright 2: Brighter	2
A6	Weekly programming selection	0: 5+2 1: 6+1 2: 7	0
A7	Setting temperature minimum limit	1-10℃	5℃
A8	Setting temperature maximum limit	20-70℃	35℃
A9	Low temperature protection	1-10℃ When setting temp = 10℃, if press will display [-] , cancel low temperature protection	5℃
AA	High temperature protection for external sensor	20℃-70℃ When setting temp =20℃, , if press will display [-] , cancel high temperature protection	45℃
AB	High temperature protection temperature difference setting	1-9℃	2℃
AC	Window function triggers temperature	5-60℃ When setting temp =5℃, if press will display [-] , cancel high window function	--
AD	Window function running time	5-60min	10
AE	Restore factory defaults (Advanced Option A)	Display Ao , long press key to whole icon show	
AF	Heating/Cooling mode	0: heating	0

		1: cooling	
--	--	------------	--

Advanced option B

Power off state, long press for 3-5 seconds to access advanced option B.

short press to choose the option, and adjust data by or , short press to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
BN	Options of sensor control	N1:Internal sensor (high temperature protection close) N2:External sensor (high temperature protection close) N3:Internal sensor control temperature ,external sensor limit temperature (external sensor detect the temperature is higher than highest temperature of external sensor, thermostat will Close relay,turn off load)	N1
BC	Descaling function	0: Disable descaling function 1: Enable descaling function	0
Bo	product information	Can't be changed	

Return difference: limit valve of external sensor is 45℃ for factory default (A6),value of external sensor control return difference (A3) is 2. when temperature rise to 45℃,then relay stop working and will remind high temperature production alarm. If temperature decline to 43℃relay continue to work and heating alarm will be relieved, (it can be operated ,only when room temperature is lower than setting temperature).

Sensor fault display: please choose correct working way of built-in and external sensor, if choose wrongly or sensor fault (breakdown), “E1” or “E2” will be displayed on the screen. Thermostat will stop heating until the fault is eliminated

Installation

